

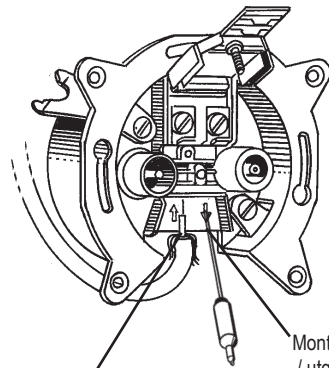


## Montering av antennekontakt

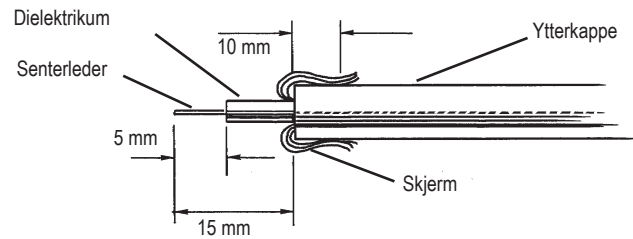

Termiering av  
inngående kabel.


Montering av termineringsmotstand (6941674)  
/ utgående kabel for neste kontakt i serie.

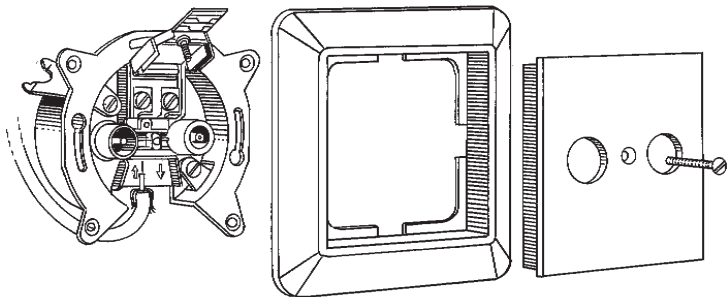

NB118  
03.03.08  
Rev.2.1

## Bruksanvisning for Antennekontakt

RS16/Antenne	1 dB
RS16/Antenne	7 dB
RS16/Antenne	14 dB
RS16/Antenne m/satelitt	

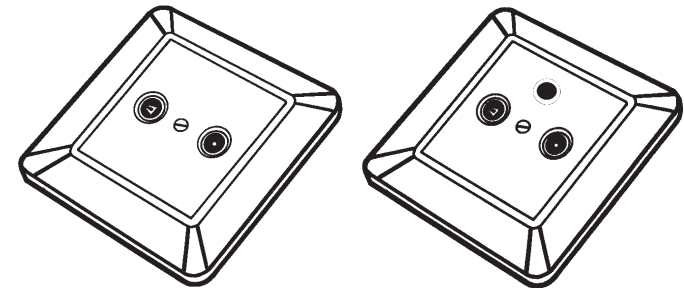

ELKO AS, Postboks 234, 1301 Sandvika, Tlf: 67 80 73 00 Fax: 67 80 73 01

