


REVISIONS				
ZONE	REV	DESCRIPTION	DATE	APPROVED
	1	SL15072	08/23'16	EDDIE
	2		01/08'17	EDDIE


# INSTRUCTION SHEET

STEP 1:

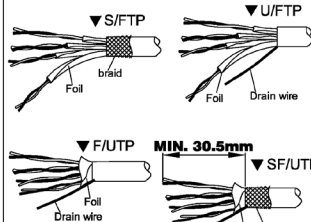


Strip off at least 30.5mm of jacket from end of cable.  
 Wire gauges : 22-24 AWG , (solid wire )  
 : 22-26 AWG , (stranded wire ,  
 AWG can not mixed use. )

STEP 2:

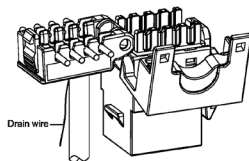


Lay the wires to the correct groove based on the color code. (T568A / T568B)

STEP 3-1:

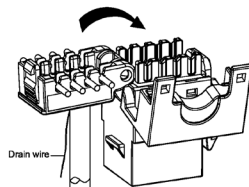


Close the cap.

3-2

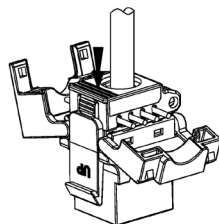


Press the cap to the latch end.

STEP 4:

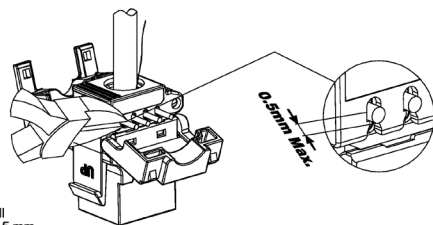


Cut the excess wires off. The tips of the wires shall protrude no more than 0.5mm.


STEP 5:

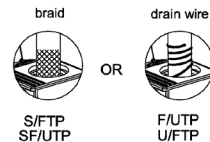

Wrap around the drain wire on the cable sheath.

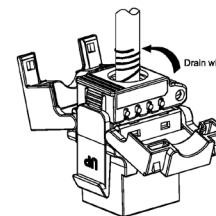


STEP 6-1:

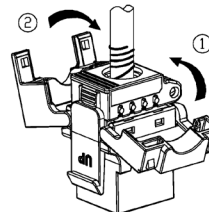


Close the jaws until hearing the click.

6-2

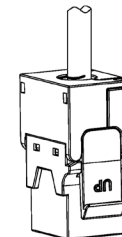


Disassemble :

STEP 1

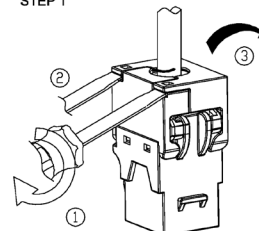

Insert the slotted screwdriver into the slot and rotate to open the jaws.

STEP 2

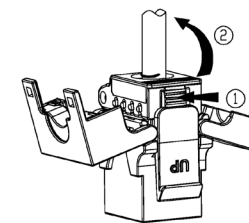

Press the latch and push up.

UNLESS OTHERWISE SPECIFIED: TOLERANCES		PROJECT ID R2101F-TMAHIF-***		TITLE	
INCH	MM	FILE	DATE	E51 402 53	
± .018	± 0.3	L4926.dwg	08/23'16		
± .004	± 0.1	DRAWN EDDIE		SIZE	DRAWING NUMBER
		CHECK		A4	L4926
		APPROVED		PART NUMBER	LL3A06982
				SCALE	1 : 1
				UNIT	mm
				SHEET	1 OF 1